

MAINTENANCE SHEET – WINDOWS AND DOORS

Steel Door Maintenance

- Apply a layer of lubricant or silicone on hinges (1-2 times per year)

Maintenance windows

- Apply a silicone lubricant on the gear mechanism of your windows
- Clean the base and the outer covering of your PVC windows
- Never use abrasive cleaner to clean them
- Check regularly the status of joint sealant on windows to not cause water infiltration (joint damaged)
- If there is condensation (internal fogging), decrease the humidity inside the house. For better circulation, remove the nets, this way, the windows will be easier to dry
- Minimal maintenance (cleaning profiles, lubrication of moving parts and weather-stripping) should be done periodically.

garantie à vie!

nordist

FENÊTRE NORDIST

145, 10th Street, Shippagan, N.-B. E8S 1B8
Tel: 506-336-4044 ■ www.nordist.com

MAINTENANCE SHEET – WINDOWS AND DOORS



nordist

FENÊTRE NORDIST

145, 10th Street, Shippagan, N.-B. E8S 1B8
Tel: 506-336-4044 ■ www.nordist.com